

VariaBlock™ Installation Instructions



Step 1

Center *VariaBlock* on top of roof nailing board. Nail into the center board every 12" up the hip or ridge.



Step 4

Press *VariaBlock* in pans of each tile. *VariaBlock* can elongate 40% from barrel to pan. Make sure the adhesive is pressed firmly to the tile.



Step 2

Form *VariaBlock* to tile roof surface. Install from bottom of hip to ridge, overlapping 3" on tile.



Step 5


When putting two rolls of *VariaBlock* together, overlap the new roll 3" over the roll that has already been applied. Cut off excess *VariaBlock* at the end of the hip or ridge with a knife or sheet metal shears. The excess material can be used for the next project.



Step 3

Remove protective strip from adhesive tape.

Trimline *VariaBlock* comes in 15" and 11³/₄" widths.

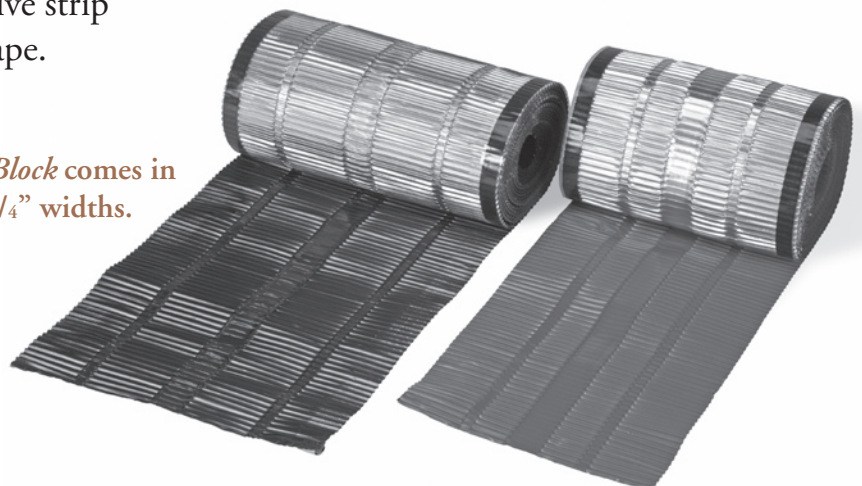

This product meets the Tile Roofing Institute's recommendation as weather blocking.